



QUICK START GUIDE

SETTING UP YOUR CONCRETE R301 SPRAYER

190451



⚠ WARNING: RISK OF PERSONAL INJURY AND CHEMICAL EXPOSURE DUE TO RUPTURE AND/OR HIGH PRESSURE DISCHARGE OF LIQUID CHEMICALS. Read instruction manual and chemical manufacturer's instructions before use.

1. Connect Hose To Tank

IMPORTANT: Do not attempt to heat or alter Hose, Hose Nut, or Adapter prior to assembly.

- Insert Hose Dip Tube into Tank. (See Figure A).
- Align tabs on Hose Adapter with slots in Tank, and push Hose Adapter into Tank until it stops. (See Figure B).
- Slide Hose Nut down to tank and turn clockwise to tighten. (See Figure C).

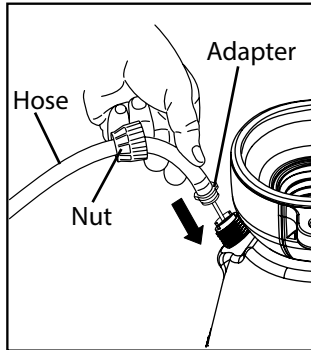


Figure A

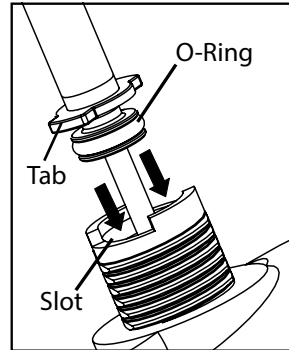


Figure B

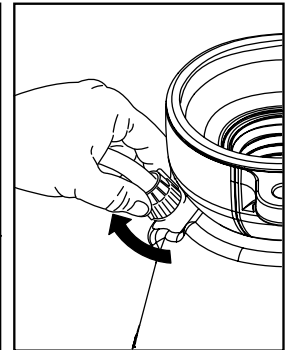


Figure C

NOTE: Do not use tools to tighten hose nut.

2. Connect Shutoff to Hose

Screw on Shutoff to end of Hose. Tighten securely. (See Figure D).

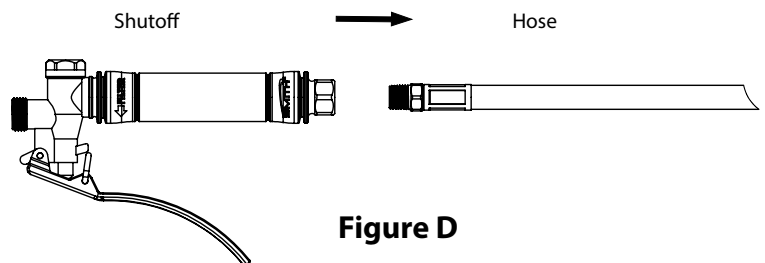


Figure D

3. Connect Nozzle to Wand

Place Check Valve inside of Brass Wand. Then place brass Teejet® Nozzle and Nut on top and screw into place. (See Figure E).

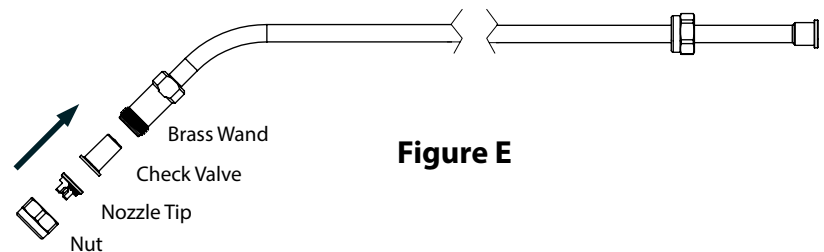


Figure E

4. Connect Wand to Shutoff

Align Wand Assembly to Shutoff and tighten Nut using a 13/16" wrench. (See Figure F).



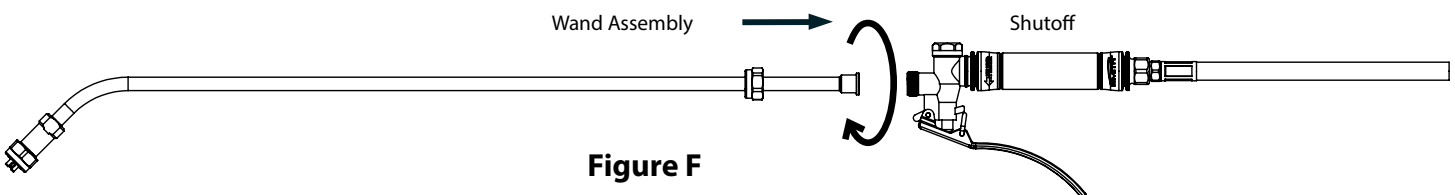


Figure F


PARTS INCLUDED WITH YOUR
CONCRETE R301 SPRAYER
190451

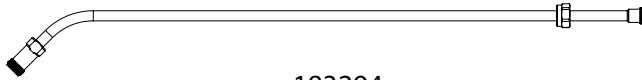


183294
24" BRASS WAND




184741
HOSE ASSEMBLY

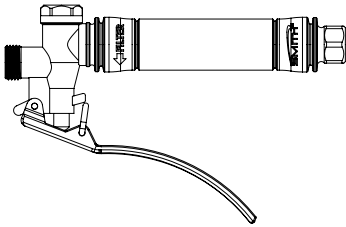


183300
SHUTOFF (VITON)

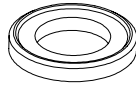

182641
SEAL (VITON)

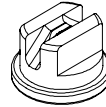


182577
TIP, TEEJET BRASS
TP9505

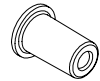

176332
CHECK VALVE
POLY PRO BLACK




182618
WARRANTY CARD

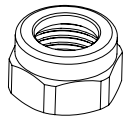

183296
NUT



181080
CARRYING STRAP

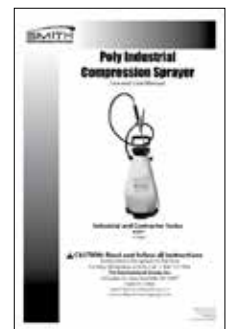

183281
MANUAL