



QUICK START GUIDE

SETTING UP YOUR ACID SPRAYER

190449



1. Assemble Hose To Tank

IMPORTANT: Do not attempt to heat or alter hose, hose nut, or barb prior to assembly.

1. Align hose barb tabs, push hose barb into tank until it stops (**See Figure A**).
2. Slide hose nut into place and turn clockwise to tighten. (**See Figure B**).

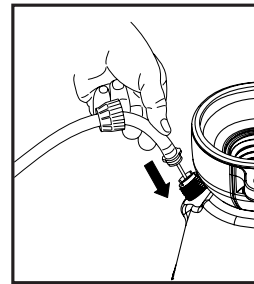


Figure A

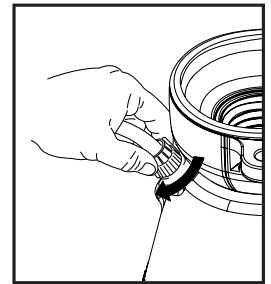


Figure B

NOTE: Do not use tools to tighten hose nut.

2. Assemble Wand & Nozzle

Place nozzle onto the end of the wand assembly and tighten securely. (**See Figure C**)



Figure C

Configuration for nozzle tip sprayers

3. Assemble Shut-off to Wand

Screw on Wand Assembly to end of Shut-off and tighten securely. (**See Figure D**)

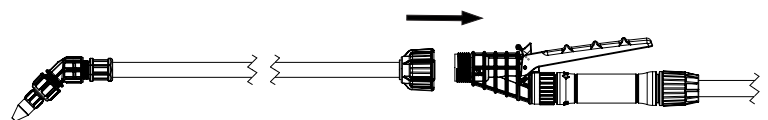


Figure D

PARTS INCLUDED WITH YOUR
ACID SPRAYER
190449



183177
SHUT-OFF ASSEMBLY



183088
21" WAND ASSEMBLY



183092
ADJUSTABLE
NOZZLE POLY



180097
NOZZLE TIP
HIGH VOLUME
(RED)



180168
NOZZLE TIP
LOW VOLUME
(YELLOW)



183090
NOZZLE FLAT
SEAL




181804
NOZZLE CAP NUT



182618
WARRANTY CARD



181080
CARRYING STRAP

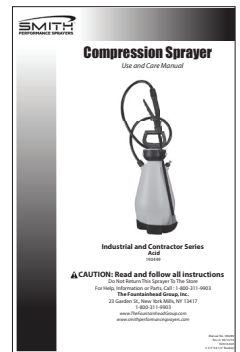

183280
MANUAL